 

 



 







 

 







 















 





 



 

 

 

 

 





 

 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	Eject/Open/Close		Eject / Surround		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Title		Sound / Title
	DVD		Shift + 2		0		0
	VCR		Shift + 4		Mute Tv		Mute / Dimmer
	AV		AV / Input / RDS		Vol- Tv		Vol-
	AV Tv		Shift + AV / Input / RDS		O)/Audio		Audio / Lang I/II
	1		1		[...]/Subtitle		Subtitle / EQ
	2		2		Camera/Angle		Info / Angle
	3		3		Rec		Rec / Rec Mode
	PR+ Tv		CH+ / Page+		Rec Mode		Shift + Rec / Rec Mode
	4		4		Timer Rec		Sleep / Timer
	5		5		<<		<< / Tune-
	6		6		>>		>> / Tune+
	PR- Tv		CH- / Page-		I<<		I<< / Preset-
	7		7		>>I		>>I / Preset+
	8		8		Pause/Step		Pause / Step / Freeze



