


 
 
 

 


 

 




 
 

 




 

 

 
 



 




 














 
 

 

 



 


 





 
 
 
 









 
 











Originale	Sostituto
 Power	 Power
 TV	 TV/R
 Q.Menu	 Menu
 Picture	 Format
 Sound	 Shift + Dual
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List

Originale	Sostituto
 Q.View	 D. Menu
 FAV	 Pre Ch
 I/II	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Page+	 Ch +
 Page-	 Ch -
 Time	 Shift + AV
 Reveal	 Media
 Update	 Subt
 Settings	 Options
 Hold	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale		Sostituto	
	OK		Ok
	Back		Back
	Exit		Exit
	Text		Text
	Stop		Stop
	<<		<<
	Index		Info
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originale		Sostituto	

