


 
 



 











 







 

 

 

 









Originale	Sostituto
 Power	 Power
Home	 +  Shift + Menu /
 e/Energy/Savin	 Sleep / Timer
 Input	 AV / Input / RDS
 AV Mode	 +  Shift + AV / Input / RDS
 TV/RAD	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 Smart / List

Originale	Sostituto
 Vol+	 Vol+
 Q.View	 Display / Media
 FAV/Mark	 Fav / Marker / PC
 Vol-	 Vol-
 Ratio	 Picture / Format
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Home	 Menu / Home
 P + / Page +	 CH+ / Page+
 Q.Menu	 D.Menu / Top
 P - / Page -	 CH- / Page-
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK
 Back	 Back / Return





Originale	Sostituto
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Stop	 Stop / Hold
 Play	 Play / Slow
 T.Opt	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 AD	 Audio / Lang I/II

Originale	Sostituto

