











 




 



















 




 



















Originale	Sostituto
 Ratio	 Picture / Format
 Power	 Power
 Input	 AV / Input / RDS
 Simplink	 Display / Media
 TV / Rad	 TV/Radio /
 Q.Menu	 D.Menu / Top
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return / Exit	 Back / Return
 Return / Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 AV Mode	 Shift + AV / Input / RDS

Originale	Sostituto
 Vol +	 Vol+
 Fav / Mark	 Fav / Marker / PC
 P+ / Page+	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 P - / Page-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0





Originale	Sostituto
 Q.VIEW	 Zoom / Size
 Red	 Red / Netflix / Search
 Stop	 Stop / Hold
 Green	 Green / APP / Repeat
 Play	 Play / Slow
 Yellow	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 I<<	 I<< / Preset-
 <<	 << / Tune-
 T.Opt	 Setup / OPT /
 >>	 >> / Tune+
 >>	 >> / Preset+
 Subtitles	 Subtitle / EQ
 Rec	 Rec / Rec Mode

Originale	Sostituto

