



Originale	Sostituto
Marche	Power
Eject	Eject / Surround
Up	Up
EFF./Clear	Exit / Cancel / Clear
Left	Left
Right	Right
OK/Horloge	OK
Down	Down
i	Info / Angle
Pause	Pause / Step / Freeze
>>/AV	>> / Tune+
<</RET	<< / Tune-
Play/Lect	Play / Slow
ENR/DEP	Rec / Rec Mode
Stop	Stop / Hold
1	1
2	2

Originale	Sostituto
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV / Video	TV/Radio /
TV / Video	Shift + 4
TV / Video	Shift + 1
0	0
Zappub	Smart / List
LP	Setup / OPT /
AV	AV / Input / RDS
Verrouillage	Display / Media
Smart Stop	Shift + Stop /
Smart Repeat	Green / APP / Repeat

