
 



 


 



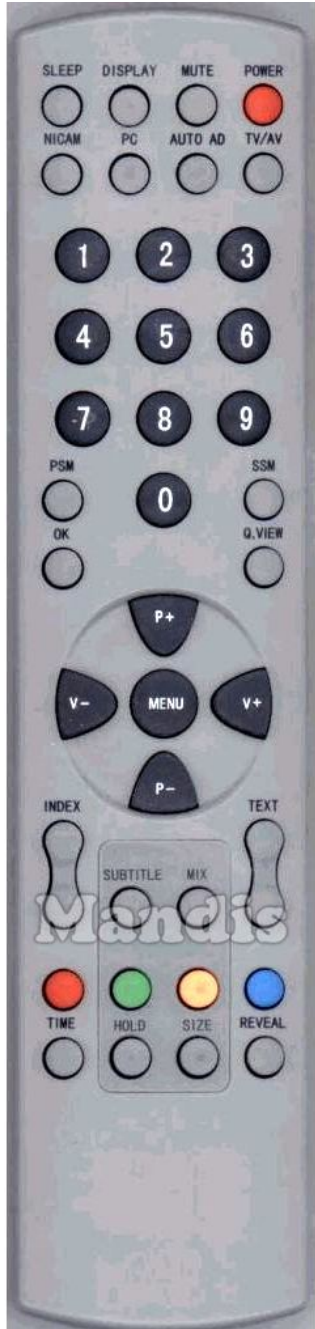 




Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Display	 Info
 Mute	 Mute
 NICAM	 Dual
 PC	 AV
 Auto AD	 Shift + Subt
 TV / AV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 PSM	 Format
 SSM	 Shift + Dual
 OK	 Ok
 Q.View	 D. Menu
 Up / P +	 Up
 Up / P +	 Ch +
 Down / P -	 Down
 Down / P -	 Ch -
 Right / V +	 Vol +
 Right / V +	 Right
 Left / V -	 Vol -
 Left / V -	 Left
 Menu	 Menu
 Index	 Smart
 Subtitle	 Subt
 Mix	 Media





Originale		Sostituto	
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Time		Shift + AV
	Hold		Pause
	Size		Eject
	Reveal		3D

Originale		Sostituto	

