

 



















 













 







 




Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Recall	 Back / Return
 V +	 Vol+
 Aspect	 Shift + Picture / Format
 CH +	 CH + / Page+

Originale	Sostituto
 V -	 Vol-
 Home	 Shift + Menu /
 CH -	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Display	 Display / Media
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 MTS	 Shift + Smart / List
 Rec	 Rec / Rec Mode





Originale	Sostituto
Guide	Guide / EPG / -/--
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Index	<< / Tune-
<< / Index	Shift + << /
Play/Pause /	Shift + Play /
Play/Pause /	Pause / Step / Freeze
Play/Pause /	Play / Slow
>> / TTX	>> / Tune+
>> / TTX	Shift + >> /
I<< / Sub.Pg	Shift + I<< / Preset-
I<< / Sub.Pg	I<< / Preset-
>>I / Reveal	>>I / Preset+
Stop / Mix	Shift + Rec / Rec Mode
Stop / Mix	Shift + Stop /

Hold

Originale	Sostituto
CAP	Shift + Display / Media
Subtitle	Subtitle / EQ
TV / Radio	TV/Radio /
FAV	Fav / Marker / PC
Size / Mouse	Zoom / Size
Hold / Refresh	Stop / Hold

