


 

 



 


 
 







 




Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV / ATV	 D.Menu / Top
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Originale	Sostituto
 Vol +	 Vol+
 MTS	 Audio / Lang I/II
 CH +	 CH+ / Page+
 Vol -	 Vol-
 RECLIST	 Smart / List
 CH -	 CH- / Page-
 FAV List	 Fav / Marker / PC
 REC	 Rec / Rec Mode
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Originale	Sostituto
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Guide	<< / Tune-
<< / Guide	Guide / EPG / -/--
Play/Pause / Timeshift	Play / Slow
>> / Aspect	>> / Tune+
<< / Cancel	<< / Preset-
>> / Subpage	>> / Preset+
Stop / Index	Info / Angle
Stop / Index	Stop / Hold
TV / Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	Setup / OPT /
Size	Zoom / Size

Originale	Sostituto
Hold	Shift + Stop /
Text	Text / Goto

