







Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 DVD/TV	 Shift + 2
 4	 4
 5	 5
 6	 6
 [<>]/Zoom	 Zoom / Size
 7	 7
 8	 8
 9	 9
 -/--/Program	 TV/Radio /
 0	 0
 Mute	 Mute / Dimmer
 i/Goto	 Info / Angle
 Z/DVD Menu	 Menu / Home

Originale	Sostituto
 P+	 Shift + CH+ /
 P+	 CH+ / Page+
 -	 Left
 OK	 OK
 +	 Right
 TXT/DVD Setup	 Text / Goto
 P-	 CH- / Page-
 P-	 Shift + CH- /
 AV/Title	 AV / Input / RDS
 Vol-	 Vol-
 Vol+	 Vol+
 SUB/Left arrow	 Left arrow / Tune-
 Update/Right arrow	 Right arrow / Tune+
 Red/Stop	 Red / Netflix / Search
 Green/Left arrow	 Green / APP / Repeat
 Yellow/Play/Pause	 Yellow / YouTube / Repeat
 Blue/Right arrow	 Blue / Prime Video / Random

