
 
 
 
 
 
 
 



 


















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Guide	 Guide
 1	 1	 ?	 Dual
 2	 2	 Exit	 Exit
 3	 3	 Menu	 Menu
 4	 4	 Back	 Back
 5	 5	 Tools	 Options
 6	 6	 @	 Media
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 FAV	 Pre Ch	 OK	 Ok
 TXT	 Text	 Vol+	 Vol +
 Red	 Red	 Vol-	 Vol -
 Green	 Green	 Mute	 Mute
 Yellow	 Yellow	 Source	 AV
 Blue	 Blue	 P+	 Ch +

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DVD
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 UP	 AV
 TOP MENU	 DISPLAY INFO	 OK	 OK
 CLEAR	 EXIT	 HOME	 SMART
 VOL+	 APP MEDIA	 CH-	 CH-
 1	 2	 3	 3
 4	 5	 6	 6
 7	 8	 9	 9
 GUIDE	 0	 FAV	 PRE-CH
 A	 B	 C	 D
 Mandis SHOP	 Mandis SHOP	 www.mandis.tv	 www.mandis.tv





Originale	Sostituto	Originale	Sostituto
P-	Ch -		
I<	I<<		
>I	>>I		
<<	<<		
>>	>>		
Rec	Rec		
Play	Play		
Pause	Pause		
Stop	Stop		
3D	3D		
OQ	Format		
[...].	Subt		
Netflix	Smart		
My Media	Shift + Media		

