












Originale	Sostituto	Originale	Sostituto
 M	Smart / List	 Smart / List	
 Power	Power	 Power	
 1	1	 1	
 2	2	 2	
 3	3	 3	
 4	4	 4	
 5	5	 5	
 6	6	 6	
 7	7	 7	
 8	8	 8	
 9	9	 9	
 Fav	Fav / Marker / PC	 Fav / Marker / PC	
 0	0	 0	
 Mute	Mute / Dimmer	 Mute / Dimmer	
 i	Info / Angle	 Info / Angle	
 [*]	D.Menu / Top	 D.Menu / Top	
 EQ	Subtitle / EQ	 Subtitle / EQ	

Originale	Sostituto	Originale	Sostituto
 Menu	Menu / Home	 Menu / Home	
 Up	Up	 Up	
 Left	Left	 Left	
 OK	OK	 OK	
 Right	Right	 Right	
 Down	Down	 Down	
 Vol-	Vol-	 Vol-	
 Vol+	Vol+	 Vol+	
 Play / Pause	Play / Slow	 Play / Slow	
 Stop	Stop / Hold	 Stop / Hold	
 I<	I<< / Preset-	 I<< / Preset-	
 >I	>>I / Preset+	 >>I / Preset+	
 Repeat	Green / APP / Repeat	 Green / APP / Repeat	
 AL 1	CH+ / Page+	 CH+ / Page+	
 AL 2	CH- / Page-	 CH- / Page-	
 S	Display / Media	 Display / Media	

