



	Originale	Sostituto	Originale	Sostituto
	Power	Power		
	Start/Stop	Play		
	Speed+	Up		
	Speed-	Down		
	Time-	Left		
	Time+	Right		
	Program	Smart		
	Manual	Media		

