

 

 








 

 


 















 







 

 

 

 

 



 

 





 



 

 

 

 



 



 

 













Originale	Sostituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Right	 Right
 Down / P-	 Down
 Down / P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 --	 Guide / EPG / -/--
 0	 0
 P < P	 Fav / Marker / PC
 PP	 Back / Return
 Vol+	 Vol+
 I-II	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [TV]	 Shift + 1
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS
 [≡]	 Text / Goto

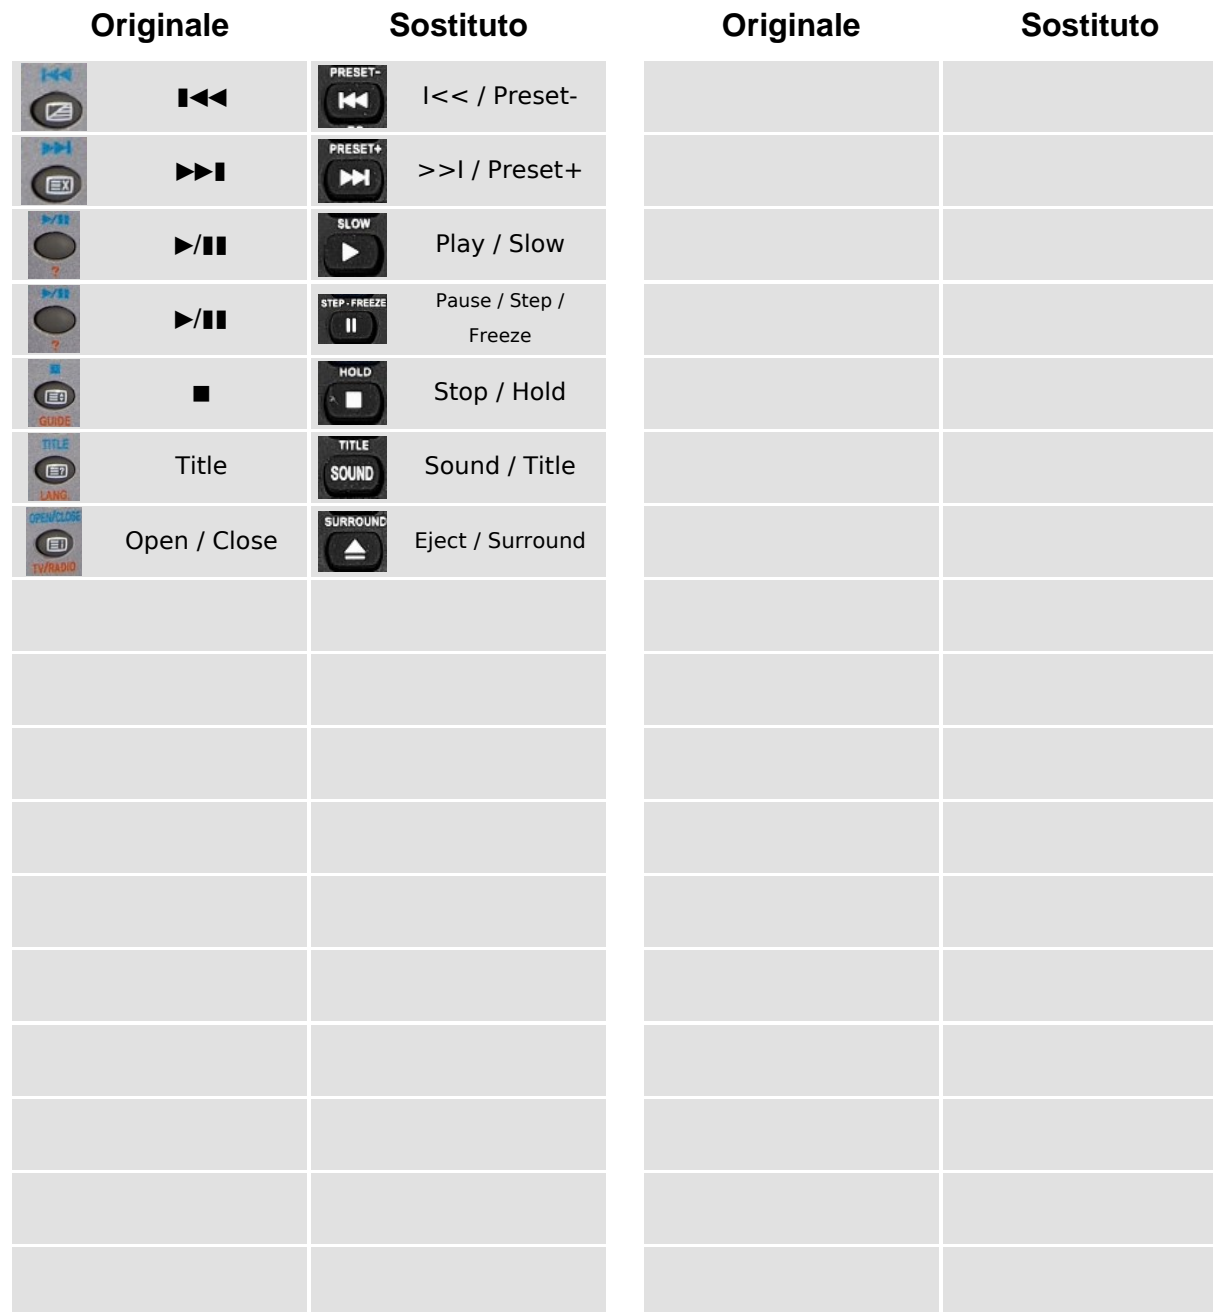 








































Originale	Sostituto	Originale	Sostituto
	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	◀		<< / Tune-
	▶		>> / Tune+







Originale	Sostituto	
On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Originale	Sostituto	
Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9



