


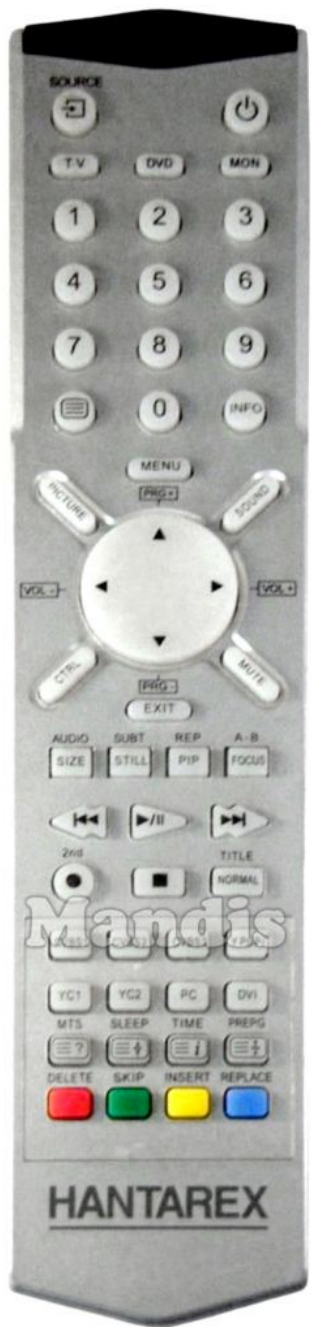

Originale	Sostituto
Source	AV / Input / RDS
Power	Power
TV	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0
Info	Info / Angle
Picture	Picture / Format
Menu	Menu / Home

Originale	Sostituto
Sound	Sound / Title
Up / Prog +	Shift + Up
Up / Prog +	Up
Left / Vol -	Left
Left / Vol -	Shift + Left
Right / Vol +	Shift + Right
Right / Vol +	Right
CTRL	D.Menu / Top
Down / Prog -	Down
Down / Prog -	Shift + Down
Mute	Mute / Dimmer
Exit	Exit / Cancel / Clear
Size / Audio	Zoom / Size
Still / Subt	Subtitle / EQ
PIP / Rep	Back / Return
Focus / A-B	Shift + Yellow / YouTube /
Normal / Title	Shift + Sound / Title








 
 
 

Originale	Sostituto
CVBS 1	Shift + 1
CVBS 2	Shift + 2
CVBS 3	Shift + 3
Y.Pb.Pr.	Setup / OPT /
YC 1	Shift + 4
YC 2	Shift + 5
PC	Fav / Marker / PC
DVI	Shift + D.Menu / Top Menu
Reveal / MTS	Shift + Back / Return
Size / Sleep	Shift + Zoom /
Index / Time	Sleep / Timer
Freeze / PREPG.	Pause / Step / Freeze
Red / Delete	Red / Netflix / Search
Green / Skip	Green / APP / Repeat
Yellow / Insert	Yellow / YouTube / Repeat
Blue / Replace	Blue / Prime Video / Random

Originale	Sostituto






Originale	Sostituto
 Source	 AV / Input / RDS
 Power	 Power
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Info	 Info / Angle
 Picture	 Picture / Format
 Menu	 Menu / Home

Originale	Sostituto
 Sound	 Sound / Title
 Up / Prog +	 Up
 Up / Prog +	 Shift + Up
 Left / Vol -	 Shift + Left
 Left / Vol -	 Left
 Right / Vol +	 Right
 Right / Vol +	 Shift + Right
 CTRL	 D.Menu / Top
 Down / Prog -	 Down
 Down / Prog -	 Shift + Down
 Exit	 Exit / Cancel / Clear
 Size / Audio	 Zoom / Size
 Still / Subt	 Subtitle / EQ
 PIP / Rep	 Back / Return
 Focus / A-B	 Shift + Yellow / YouTube / REPEAT A-B
 << / I<<	 << / Tune-
 Play / Pause	 Play / Slow



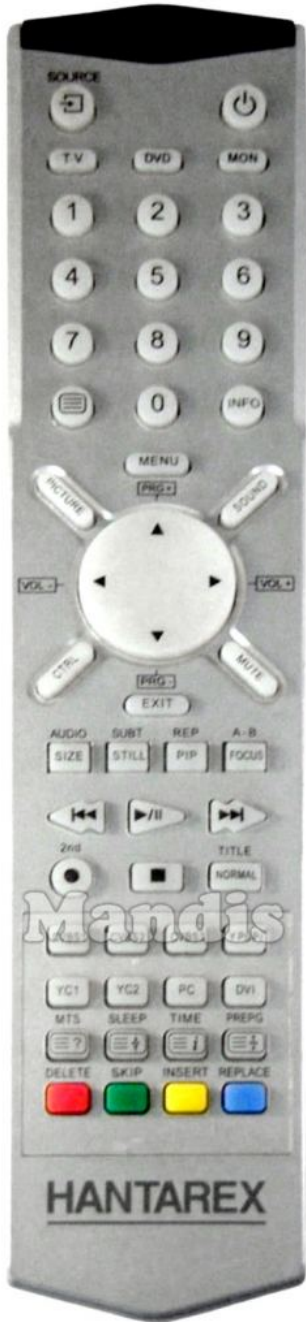

Originale	Sostituto
Play / Pause	+  Shift + Play /
>> / >>	>> / Tune+
Rec / 2nd	Rec / Rec Mode
Stop	Stop / Hold
Normal / Title	+  Shift + Sound / Title
CVBS 1	+  Shift + 1
CVBS 2	Display / Media
CVBS 3	+  Shift + 3
Y.Pb.Pr.	Setup / OPT /
YC 1	+  Shift + 4
YC 2	+  Shift + 5
PC	Fav / Marker / PC
DVI	+  Shift + D.Menu / Top Menu
Reveal / MTS	+  Shift + Back / Return
Size / Sleep	+  Shift + Zoom /
Index / Time	Sleep / Timer
Freeze / PREPG.	Pause / Step / Freeze

Originale	Sostituto
Red / Delete	Red / Netflix / Search
Green / Skip	Green / APP / Repeat
Yellow / Insert	Yellow / YouTube / Repeat
Blue / Replace	Blue / Prime Video / Random






Originale	Sostituto
Source	AV / Input / RDS
Power	Power
TV	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0
Info	Info / Angle
Picture	Picture / Format
Menu	Menu / Home

Originale	Sostituto
Sound	Sound / Title
Up / Prog +	Up
Up / Prog +	+  Shift + Up
Left / Vol -	+  Shift + Left
Left / Vol -	Left
Right / Vol +	+  Shift + Right
Right / Vol +	Right
CTRL	D.Menu / Top
Down / Prog -	+  Shift + Down
Down / Prog -	Down
Mute	Mute / Dimmer
Exit	Exit / Cancel / Clear
Size / Audio	Zoom / Size
Still / Subt	Subtitle / EQ
PIP / Rep	Back / Return
Focus / A-B	+  Shift + Yellow / YouTube /
Rec / 2nd	Rec / Rec Mode



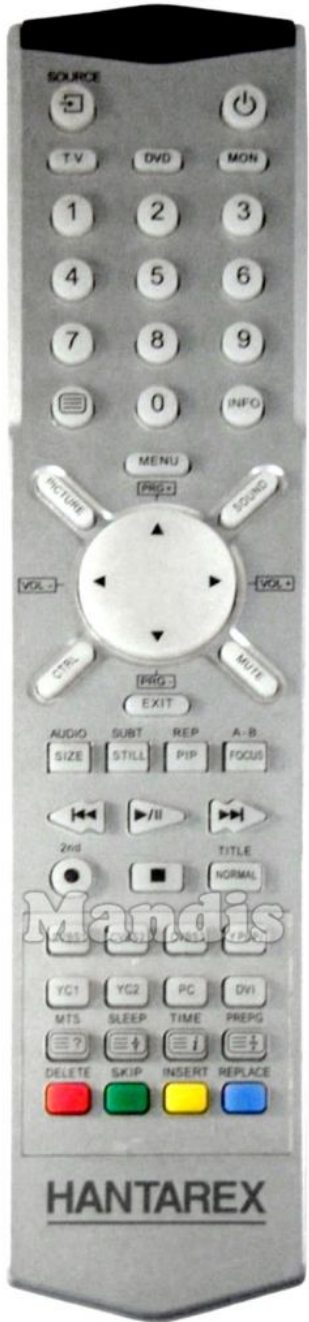

Originale		Sostituto	
	Normal / Title	 + 	Shift + Sound / Title
	CVBS 1	 + 	Shift + 1
	CVBS 2	 + 	Shift + 2
	CVBS 3	 + 	Shift + 3
	Y.Pb.Pr.		Setup / OPT /
	YC 1	 + 	Shift + 4
	YC 2	 + 	Shift + 5
	PC		Fav / Marker / PC
	DVI	 + 	Shift + D.Menu / Top Menu
	Reveal / MTS	 + 	Shift + Back / Return
	Size / Sleep	 + 	Shift + Zoom /
	Index / Time		Sleep / Timer
	Freeze / PREPG.		Pause / Step / Freeze
	Red / Delete		Red / Netflix / Search
	Green / Skip		Green / APP / Repeat
	Yellow / Insert		Yellow / YouTube / Repeat
	Blue / Replace		Blue / Prime Video / Random

Originale	Sostituto

