



Originale		Sostituto		Originale		Sostituto	
	On		Power		Left		Left
	Off		Shift + Power		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	Mute		Mute		4		4
	Test		Smart		5		5
	Night		Exit		6		6
	[≡]		Text		7		7
	Sleep		Sleep		8		8
	Surr.		Dual		9		9
	SPKR/Menu		Menu		0		0
	Delay/Normal		Info		Tun-M/[≡+]		Guide
	CH./[≡?]		TV/R		Mem/[≡◇]		Pre Ch
	Digital/[≡X]		Media		Tuning ▲		Ch +
	Up		Up		Tuning ▼		Ch -
	Down		Down		Direct/Green		Green
	Right		Right		Clear/Yellow		Yellow



 


 


 
 





 
 



 



 


 
 

 
 
 
 


 
 


 
 
 
 



 
 



 


 
 


 


 









Originale	Sostituto
Preset ▲	Shift + Ch +
Preset ▼	Shift + Ch -
RDS/D.Skip	Options
Set	Ok
Red	Red
Blue	Blue
DVD	Shift + 2
AVR	Shift + 1
CD	Shift + 3
Tape	Shift + 4
VID1/VCR	Shift + 5
VID2/TV	Shift + 6
VID3/CBL/SAT	Shift + 7
VID4	Shift + 8
AM/FM	Shift + 9
> DVD	Play
<< DVD	<<

Originale	Sostituto
>> DVD	>>
Stop DVD	Stop
Pause DVD	Pause
I<</Skip Down	I<<
Skip Up/>>I	>>I





Originale		Sostituto		Originale		Sostituto	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Night		Exit		5		5
	[≡]		Text		6		6
	Vol+		Vol +		7		7
	Vol-		Vol -		8		8
	SPKR/Menu		Menu		9		9
	CH./[≡?]		TV/R		0		0
	Digital/[≡X]		Media		Tun-M/[≡+]		Guide
	Delay/Normal		Info		Mem/[≡◇]		Pre Ch
	Up		Up		Direct		Smart
	Down		Down		Clear		Shift + Exit
	Right		Right		Preset ▲		Ch +
	Left		Left		Preset ▼		Ch -
	Set		Ok		RDS/D.Skip		Options
	1		1		>>		>>
	2		2		<<		<<

 





 



 
 

 





 

 






 










Originale		Sostituto		Originale		Sostituto	
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	>>		>>				
	<<		<<				





Originale	Sostituto
 Power On	 Power
 Power Off	 +  Shift + Power
 SPKR/Menu	 Menu
 Delay/Normal	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M/[≡+]	 Guide
 Mem/[≡◆]	 Pre Ch
 Direct	 Smart

Originale	Sostituto
 Preset ▲/Blue	 Ch +
 RDS/D.Skip	 Options
 >>	 >>
 <<	 <<
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 >>	 >>
 <<	 <<
 Power (On /Off)	 Media
 PR+ VCR	 +  Shift + Ch +
 PR- VCR	 Ch -
 Vol+ VCR	 Vol +
 Vol- VCR	 Vol -
 Input VCR	 AV
 1 VCR	 +  Shift + 1
 2 VCR	 +  Shift + 2





Originale		Sostituto	
	3 VCR	+	Shift + 3
	4 VCR	+	Shift + 4
	5 VCR	+	Shift + 5
	6 VCR	+	Shift + 6
	7 VCR	+	Shift + 7
	8 VCR	+	Shift + 8
	9 VCR	+	Shift + 9
	0 VCR	+	Shift + 0
	Clear VCR		Exit
	Play VCR		Red
	Stop VCR		Green
	Rec VCR		Rec
	>> VCR		Blue
	<< VCR		Yellow

Originale	Sostituto





	Originale	Sostituto		Originale	Sostituto
	<>	 Play			
	>>	 >>			
	<<	 <<			
	Stop	 Stop			
	Rec	 Rec			

