



| Originale | Sostituto |
|--------------|------------------|
| Off | Shift + Power |
| On | Power |
| Mute | Mute / Dimmer |
| AVR | Smart / List |
| DVD | Shift + 2 |
| CD | Shift + 3 |
| Tape | Shift + 5 |
| VID1/VCR | Shift + 4 |
| VID2/TV | Shift + 1 |
| VID3/CBL/SAT | Shift + 0 |
| VID4 | Shift + 7 |
| AM/FM | Shift + 6 |
| 6 CH | Shift + 8 |
| Sleep | Sleep / Timer |
| Test | Text / Goto |
| Vol+ | Vol+ |
| Surr. | Eject / Surround |

| Originale | Sostituto |
|--------------|---------------|
| Night | TV/Radio / |
| M-Room | Zoom / Size |
| Vol- | Vol- |
| CH. | Info / Angle |
| Up | Up |
| SPKR/Menu | Menu / Home |
| Left | Left |
| Set | OK |
| Right | Right |
| Digital | D.Menu / Top |
| Down | Down |
| Delay/Normal | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |






















 




 



 




 


















| Originale | Sostituto | Originale | Sostituto |
|-----------|-----------|-------------------|------------------------|
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX - HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| TUN-M | Tun-M | NETFLIX SEARCH | Red / Netflix / Search |
| 9 | 9 | BLUETOOTH 9 | 9 |
| 0 | 0 | HDMI - BAT 0 | 0 |
| MEM | Mem | APP REPEAT | Green / APP / Repeat |
| Tuning ▲ | Tuning ▲ | TUNE+ | >> / Tune+ |
| DIRECT | Direct | RETURN BACK | Back / Return |
| CLEAR | Clear | CLEAR EXIT CANCEL | Exit / Cancel / Clear |
| Preset ▲ | Preset ▲ | PRESET+ | >>I / Preset+ |
| Tuning ▼ | Tuning ▼ | TUNE- | <<< / Tune- |
| OSD | OSD | MEDIA DISPLAY | Display / Media |
| RDS | RDS | RDS AV INPUT | AV / Input / RDS |
| Preset ▼ | Preset ▼ | PRESET- | I<<< / Preset- |
| <<< DVD | <<< DVD | SHIFT + TUNE- | Shift + <<< / |
| Play DVD | Play DVD | SHIFT + SLOW | Shift + Play / Slow |

| Originale | Sostituto | Originale | Sostituto |
|----------------|----------------|-----------------------|------------------------|
| >>> DVD | >>> DVD | SHIFT + TUNE+ | Shift + >>> / |
| Stop DVD | Stop DVD | SHIFT + HOLD | Shift + Stop / |
| Pause DVD | Pause DVD | SHIFT + STEP - FREEZE | Shift + Pause / Step / |
| I<<</Skip Down | I<<</Skip Down | SHIFT + PRESET- | Shift + I<<< / Preset- |
| Skip Up/>>>I | Skip Up/>>>I | SHIFT + PRESET+ | Shift + >>>I / Preset+ |















































 



 



 

















| Originale | Sostituto |
|--|---|
|  Power Off |  Shift + Power |
|  Power On |  Power |
|  Vol+ |  Vol+ |
|  Night |  TV/Radio / |
|  [≡] / M-Room |  Zoom / Size |
|  Vol- |  Vol- |
|  CH. |  Info / Angle |
|  Up |  Up |
|  SPKR/Menu |  Menu / Home |
|  Left |  Left |
|  Set |  OK |
|  Right |  Right |
|  Digital/Exit |  D.Menu / Top |
|  Down |  Down |
|  Delay/Normal |  Setup / OPT / |
|  1 |  1 |
|  2 |  2 |

| Originale | Sostituto |
|--|---|
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  Tun-M |  Red / Netflix / Search |
|  9 |  9 |
|  0 |  0 |
|  Mem |  Green / APP / Repeat |
|  Direct |  Back / Return |
|  Clear |  Exit / Cancel / Clear |
|  Preset ▲ |  Shift + >>I / Preset+ |
|  RDS |  AV / Input / RDS |
|  Preset ▼ |  Shift + I<< / Preset- |
| << | << / Tune- |
| Play | Play / Slow |





| Originale | | Sostituto | | Originale | | Sostituto | |
|---|--------------|---|------------------------|---|----------------|---|-----------------------|
|  | Power On |  | Power |  | Mem |  | Green / APP / Repeat |
|  | Power Off |  | Shift + Power |  | RDS |  | AV / Input / RDS |
|  | Vol- |  | Vol- |  | >> |  | >> / Tune+ |
|  | Vol+ |  | Vol+ |  | << |  | << / Tune- |
|  | SPKR/Menu |  | Menu / Home |  | Play |  | Play / Slow |
|  | 1 |  | 1 |  | Stop |  | Stop / Hold |
|  | Delay/Normal |  | Setup / OPT / |  | Direct |  | Back / Return |
|  | 2 |  | 2 |  | Pause |  | Pause / Step / Freeze |
|  | 3 |  | 3 |  | Preset ▲ |  | CH+ / Page+ |
|  | 4 |  | 4 |  | >> |  | >> / Preset+ |
|  | 5 |  | 5 |  | << |  | << / Preset- |
|  | 6 |  | 6 |  | Power (On/Off) |  | Mute / Dimmer |
|  | 7 |  | 7 |  | PR+ VCR |  | Shift + CH+ / |
|  | 8 |  | 8 |  | PR- VCR |  | Shift + CH- / |
|  | 9 |  | 9 |  | Vol- VCR |  | Shift + Vol- |
|  | 0 |  | 0 |  | Vol+ VCR |  | Shift + Vol+ |
|  | Tun-M |  | Red / Netflix / Search |  | 1 VCR |  | Shift + 1 |



