
 







Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Mute	 Mute
 Cable/SAT	 Shift + 1
 STB	 Shift + 2
 TV	 Shift + 3
 Disc	 Shift + 4
 MHL	 Shift + 5
 AUX	 Shift + 6
 Audio	 Shift + 7
 Game	 Shift + 8
 AVR	 Shift + 9
 USB	 Shift + Guide
 Network	 Shift + 0
 Radio	 Shift + Pre Ch
 Surr Mode	 Dual
 OSD Menu	 Menu

Originale	Sostituto
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back/Exit	 Back
 Home	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale	Sostituto	Originale	Sostituto
 Clear	 Exit	 >	 >>
 Test	 Text	 Stop	 Stop
 Vol+	 Vol +	 Play	 Play
 Vol-	 Vol -	 Pause	 Pause
 Delay	 Options	 PrevCH	 Pre Ch
 Info/Option	 Info		
 Sleep	 Sleep		
 Dim	 List		
 CH/Tuner Up	 Ch +		
 CH/Tuner Down	 Ch -		
 P-Scan / Top	 D. Menu		
 Direct	 TV/R		
 Mem	 Rec		
 RDS/*	 Subt		
 I<	 I<<		
 <<	 <<		
 >>	 >>		

Originale	Sostituto
 >	 >>
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 PrevCH	 Pre Ch

