



 







 



















Originale	Sostituto
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Shift + Back / Return
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Originale	Sostituto
Vol-	Vol-
World/Internet	Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Camera/Music/Ph	Picture / Format
Guide	Guide / EPG / -/-
*/o	Shift + Guide / EPG / -/-
*/o..	Fav / Marker / PC





	Originale	Sostituto	Originale	Sostituto
	[≡]/Text	 GOTO TEXT		Text / Goto
	Red	 NETFLIX SEARCH		Red / Netflix / Search
	Green	 APP REPEAT		Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM		Blue / Prime Video / Random
	Lang	 LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	 SHIFT + GOTO TEXT		Shift + Text /
	[-o-]	 OPT-TOOLS SETUP		Setup / OPT /
	<<	 TUNE- TUNE-		<< / Tune-
	Pause	 STEP-FREEZE STEP-FREEZE		Pause / Step / Freeze
	>>	 TUNE+ TUNE+		>> / Tune+
	Rec	 REC MODE REC MODE		Rec / Rec Mode
	Play	 SLOW SLOW		Play / Slow
	Stop	 HOLD HOLD		Stop / Hold

