




















 



 



 




Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	1. ?	 1
Mute	 Mute / Dimmer	2abc	 2
Audio	 Audio / Lang I/II	3def	 3
Sleep Timer	 Sleep / Timer	4ghi	 4
TV	 TV/Radio /	5jkl	 5
Text	 Text / Goto	6mno	 6
Video	 AV / Input / RDS	7pqrm	 7
Menu	 Menu / Home	8tuv	 8
Menu Up	 Up	9wxyz	 9
Menu Left	 Left	0/10	 0
Menu Right	 Right	FAV Pref.	 Fav / Marker / PC
Menu Down	 Down	Red	 Red / Netflix / Search
Volume+	 Vol+	Yellow	 Yellow / YouTube / Repeat
CH/Page+	 CH+ / Page+	TV	 Shift + 1
Volume-	 Vol-	Video	 Shift + 4
Display	 Display / Media		
CH/Page-	 CH- / Page-		

