











| Originale | Sostituto | Originale | Sostituto |
|--|---|---|--|
|  Power |  Power |  P+ |  CH+ / Page+ |
|  Tv/DTV |  TV/Radio / |  Vol- |  Vol- |
|  Source |  AV / Input / RDS |  P- |  CH- / Page- |
|  1 |  1 |  Guide |  Guide / EPG / -/- |
|  2 |  2 |  Menu |  Menu / Home |
|  3 |  3 |  W.Link |  Display / Media |
|  4 |  4 |  Tools |  Setup / OPT / |
|  5 |  5 |  Return |  Back / Return |
|  6 |  6 |  Up |  Up |
|  7 |  7 |  Left |  Left |
|  8 |  8 |  Enter |  OK |
|  9 |  9 |  Right |  Right |
|  -/- |  Shift + Guide / EPG / -/- |  Info |  Info / Angle |
|  0 |  0 |  Down |  Down |
|  PRE-CH |  Fav / Marker / PC |  Exit |  Exit / Cancel / Clear |
|  Vol+ |  Vol+ |  Red |  Red / Netflix / Search |
|  Mute |  Mute / Dimmer |  Green |  Green / APP / Repeat |

| Originale | Sostituto | Originale | Sostituto |
|---|---|---|--|
|  P+ |  CH+ / Page+ |  Vol- |  Vol- |
|  P- |  CH- / Page- |  Guide |  Guide / EPG / -/- |
|  Menu |  Menu / Home |  W.Link |  Display / Media |
|  Tools |  Setup / OPT / |  Return |  Back / Return |
|  Up |  Up |  Left |  Left |
|  Enter |  OK |  Right |  Right |
|  Info |  Info / Angle |  Down |  Down |
|  Exit |  Exit / Cancel / Clear |  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat | | |



