 


 

 

 
 

 
 
 
 








 
 
 

 


 
 

 
 






Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ↔	 Pre Ch
 Back	 Back
 Menu	 Menu
 Netflix	 Media
 Internet	 Smart
 Ok	 Ok

Originale	Sostituto
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Mute	 Mute
 i	 Info
 Exit	 Exit
 Source	 AV
 Q.Menu	 D. Menu
 EPG	 Guide
 TXT	 Text
 *	 Format
 */Q	 3D





Originale		Sostituto		Originale	Sostituto
	[>]	SETTINGS OPT	Options		
LANG.	Lang	SOUND DUAL	Dual		
SUBT.	Subt.	AD SUBT	Subt		
	[+]	SHIFT + PICTURE FORMAT	Shift + Format		
	TV	SEARCH TV/R	TV/R		
	Red	A	Red		
	Green	B	Green		
	Yellow	C	Yellow		
	Blue	D	Blue		
	Rec	REC MODE	Rec		
	Play	PLAY MODE	Play		
	Stop		Stop		
	Pause		Pause		
	<<		<<		
	>>		>>		

