



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Up		Up
	Play		Play / Slow		i		Info / Angle
	Pause		Pause / Step / Freeze		Left		Left
	Stop		Stop / Hold		OK		OK
	Rec		Rec / Rec Mode		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	>>		>> / Tune+		Down		Down
	Lang		Audio / Lang I/II		Back		Back / Return
	Source (Games)		Eject / Surround		Vol+		Vol+
	Movie-Music-Phot		Picture / Format		World (Violet)		Smart / List
	[≡]..		Zoom / Size		PR+		CH+ / Page+
	*/O		Sleep / Timer		Vol-		Vol-
	TV		TV/Radio /		*/Q		Display / Media
	Q.Menu		D.Menu / Top		PR-		CH- / Page-
	[-O-]		Setup / OPT /		1		1
	[≡]/Text		Text / Goto		2		2





Originale		Sostituto	
3 def	3	CD - STB 3	3
4 ghi	4	VIDEO 4	4
5 jkl	5	TAPE 5	5
6 mno	6	TUNER 6	6
7 pqrs	7	AUX - HDD 7	7
8 tuv	8	USB 8	8
9 wxyz	9	BLUETOOTH 9	9
Guide	Guide	Guide / EPG / -/--	Guide / EPG / -/--
0	0	HDMI - BAT 0	0
	Red	NETFLIX SEARCH Red / Netflix / Search	Red / Netflix / Search
	Green	APP REPEAT Green / APP / Repeat	Green / APP / Repeat
	Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM Blue / Prime Video / Random	Blue / Prime Video / Random
	Recall	SHIFT + RETURN BACK Shift + Back / Return	Shift + Back / Return

Originale		Sostituto	

