

 

 

 
 
 

 

 



 

 

 

 

 

 

 

 







Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 P.Mode	 Setup / OPT /
 S.Mode	 Sound / Title
 Home	 Shift + Menu /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Q.View	 D.Menu / Top
 0	 0
 Sleep	 Sleep / Timer

Originale	Sostituto
 Vol-	 Vol-
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 I/II/Audio	 Audio / Lang I/II
 P-	 CH- / Page-
 Subtitle	 Subtitle / EQ
 3D World	 Display / Media
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Screen	 Picture / Format
 CH List	 Smart / List
 Menu	 Menu / Home
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK



