

 

 
 

 

 




 



 

 
 

 








 



 
 


























 

 

 

 

 

 

 

 



 

 

Originale	Sostituto
 D.Menu	 D.Menu / Top
 Power	 Power
 Open / Close	 Eject / Surround
 Info	 Info / Angle
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Audio I/II	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 CH. List	 Smart / List
 Screen	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Q.View	 Shift + Menu /
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Vol +	 Vol+
 P+	 CH+ / Page+
 Vol -	 Vol-
 P -	 CH- / Page-
 Menu	 Menu / Home
 FAV	 Fav / Marker / PC
 Up	 Up
 Left	 Left
 OK	 OK





Originale	Sostituto
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Record	 Rec / Rec Mode
 [X] / Repeat	 Back / Return
 ► / Index	 Play / Slow
 ■■ Pause	 Pause / Step / Freeze
 ■ Stop	 Stop / Hold
 Red / ◀◀ / REV	 Shift + Red / Netflix / Search
 Red / ◀◀ / REV	 Red / Netflix / Search
 Green / ▶▶ / FWD	 Shift + Green / APP / Repeat
 Green / ▶▶ / FWD	 Green / APP / Repeat
 Yellow / ◀◀◀ / Prev	 Shift + Yellow / YouTube / Repeat A-B
 Yellow / ◀◀◀ / Prev	 Yellow / YouTube / Repeat
 Blue / ▶▶▶ / Next	 Blue / Prime Video / Random
 Blue / ▶▶▶ / Next	 Shift + Blue / Prime
 [≡] / Setup	 Setup / OPT /

Originale	Sostituto
 [≡] / Setup	 Shift + Setup / OPT / Tools
 [ /≡] / Title	 Shift + Sound / Title
 [....] / Search	 Text / Goto
 [....] / Search	 Shift + Text /
 [□] / 10+	 Shift + 9
 [□] / 10+	 Shift + 0
 [?] / Program	 Shift + Guide / EPG / -/-
 [◆] / A-B	 Shift + Fav / Marker / PC
 ⊕ / Angle / Rec. List	 Shift + TV/Radio / Program
 ⊕ / Angle / Rec. List	 Shift + Sleep / Timer
 D.Call	 Shift + D.Menu / Top Menu

