



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Up		Up
	PBC		Back / Return		Zoom		Zoom / Size
	Prog		TV/Radio /		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Title		Sound / Title
	3		3		Down		Down
	4		4		Menu		Menu / Home
	5		5		<<		<< / Tune-
	6		6		Angle		Info / Angle
	7		7		Play		Play / Slow
	8		8		Pause		Pause / Step / Freeze
	9		9		>>		>> / Tune+
	0		0		Subtitle		Subtitle / EQ
	10+		Guide / EPG / -/--		Audio		Audio / Lang I/II
	Time		Sleep / Timer		Stop		Stop / Hold
	Setup		Setup / OPT /		I<<		I<< / Preset-



