

 

 

 







 











Originale	Sostituto
	 Menu / Home
	 Up
	 CH+ / Page+
	 Power
	 Left
	 Vol-
	 Right
	 Vol+
	 CH- / Page-
	 Down
	 1
	 2
	 3
	 4
	 5
	 6
	 7

Originale	Sostituto
	 8
	 9
	 Back / Return
	 0
	 Guide / EPG / -/--
	 AV / Input / RDS
	 Smart / List
	 Mute / Dimmer
	 Picture / Format
	 Exit / Cancel / Clear
	 Display / Media

