



 









Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Down / CH-	 Ch -
 Mute	 Mute	 Right / Vol+	 Right
 1	 1	 Right / Vol+	 Vol +
 2	 2	 Left / Vol-	 Left
 3	 3	 Left / Vol-	 Vol -
 4	 4	 OK / Store	 Ok
 5	 5	 P-	 Shift + Ch -
 6	 6	 P+	 Shift + Ch +
 7	 7	 EPG	 Guide
 8	 8	 Back	 Back
 9	 9	 i	 Info
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 Text	 Text
 Exit	 Exit	 Aspect	 Format
 Up / CH+	 Up	 Picture	 Shift + Format
 Up / CH+	 Ch +	 Audio	 Dual
 Down / CH-	 Down	 Sleep	 Sleep

Originale	Sostituto	Originale	Sostituto
 Down / CH-	 Ch -	 TV	 AUX
 Right / Vol+	 Right	 DVD	 SAT
 Right / Vol+	 Vol +	 PLAY MODE	 REC MODE
 Left / Vol-	 Left	 FF	 ■
 Left / Vol-	 Vol -	 RR	 ▶
 OK / Store	 Ok	 SOUND	 AD
 P-	 Shift + Ch -	 SETTINGS	 OPT
 P+	 Shift + Ch +	 LIST	 SUBT
 EPG	 Guide	 PROG	 SEARCH
 Back	 Back	 PICTURE	 ECO
 i	 Info	 SLEEP	 TV/R
 Subtitle	 Subt	 E-MANUAL	 REPEAT
 Text	 Text	 D.MENU	 TEXT
 Aspect	 Format	 ZOOM	 TIMER
 Picture	 Shift + Format	 TOP MENU	 DISPLAY
 Audio	 Dual	 MENU	 INFO
 Sleep	 Sleep	 CLEAR	 EXIT





Originale		Sostituto	
	Red / TV/Radio		Red
	Red / TV/Radio		TV/R
	Green / FAV		Green
	Green / FAV		Pre Ch
	Yellow / List		Yellow
	Yellow / List		List
	Blue / +/-		Blue
	All CH		Smart
	White / ?		Options

Originale		Sostituto	

