




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down

Originale	Sostituto
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK / Store	 Ok
 P-	 Shift + Ch -
 P+	 Shift + Ch +
 EPG	 Guide
 Back	 Back
 i	 Info
 Subtitle	 Subt
 Text	 Text
 Aspect	 Format
 Picture	 Shift + Format
 Audio	 Dual
 Sleep	 Sleep





Originale		Sostituto		Originale		Sostituto	
	Red / TV/Radio		Red				
	Red / TV/Radio		TV/R				
	Green / FAV		Green				
	Green / FAV		Pre Ch				
	Yellow / List		Yellow				
	Yellow / List		List				
	Blue / +/-		Blue				
	All CH		Smart				
	White / ?		Options				

