



Originale	Sostituto
Power	Power
Source (Games)	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Originale	Sostituto
Vol-	Vol-
World/Internet	Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Movie-Music-Phot	Display / Media
Guide	Guide / EPG / -/-
*/o	Picture / Format
*/o..	Setup / OPT /





	Originale	Sostituto	Originale	Sostituto
	[≡]/Text	 GOTO TEXT		Text / Goto
	Red	 NETFLIX SEARCH		Red / Netflix / Search
	Green	 APP REPEAT		Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM		Blue / Prime Video / Random
	Lang	 LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	 EQ SUBTITLE		Subtitle / EQ
	[-o-]	 SIZE ZOOM		Zoom / Size
	<<	 TUNE- ◀		<< / Tune-
	Pause	 STEP-FREEZE 		Pause / Step / Freeze
	>>	 TUNE+ ▶		>> / Tune+
	Rec	 REC MODE ●		Rec / Rec Mode
	Play	 SLOW ▶		Play / Slow
	Stop	 HOLD ■		Stop / Hold

