



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Info		Info / Angle
	Mute		Mute / Dimmer		[I]/Menu		Menu / Home
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Source		AV / Input / RDS
	Yellow		Yellow / YouTube / Repeat		Left		Left
	Blue		Blue / Prime Video / Random		OK		OK
	<</[≡o]		<< / Tune-		Right		Right
	>>/[≡?]		>> / Tune+		Down		Down
	I<</[≡+]		I<< / Preset-		EPG		Guide / EPG / -/-
	>>I/[≡..]		>>I / Preset+		Exit		Exit / Cancel / Clear
	Play		Play / Slow		Vol+		Vol+
	Pause		Pause / Step / Freeze		FAV		Fav / Marker / PC
	Stop		Stop / Hold		CH+		CH+ / Page+
	[≡i]		Smart / List		Vol-		Vol-
	Text		Text / Goto		REP/Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ		CH-		CH- / Page-
	Freeze		Shift + Pause / Step / Freeze		1		1



















Originale	Sostituto
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
AUDIO	LANG I/II AUDIO Audio / Lang I/II
0	HDMI - BAT 0
RECALL	RETURN BACK Back / Return

Originale	Sostituto







Originale	Sostituto
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</Hold	 << / Tune-
>>/Index	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Nicam/A2	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
Subpage	 Eject / Surround
Size	 Zoom / Size
Sleep	 Sleep / Timer
DTV/Radio	 TV/Radio /
Reveal	 D.Menu / Top

Originale	Sostituto
TXT/MIX	 Text / Goto
Menu	 Menu / Home
Up	 Up
Info	 Info / Angle
Left	 Left
Enter	 OK
Right	 Right
Cancel	 Exit / Cancel / Clear
Down	 Down
Back	 Back / Return
Vol+	 Vol+
List	 Smart / List
CH+	 CH+ / Page+
Vol-	 Vol-
Mode	 Display / Media
CH-	 CH- / Page-
1	 1







































Originale	Sostituto	Originale	Sostituto
2	 2	2	2
3	 3	3	3
4	 4	4	4
5	 5	5	5
6	 6	6	6
7	 7	7	7
8	 8	8	8
9	 9	9	9
EPG	 Guide / EPG / -/--		
0	 0	0	0
FAV	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
<</Hold	 Shift + Stop /		
FAV-	 Shift + Left		

Originale	Sostituto	Originale	Sostituto
FAV+	 Shift + Right		
-/--	 Shift + Guide / EPG / -/--		


















Originale	Sostituto	Originale	Sostituto
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Originale	Sostituto	Originale	Sostituto
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Originale	Sostituto	Originale	Sostituto
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 Shift + Pause / Step /		

