



 

 

 





 

 










 




| Originale | Sostituto |
|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  DTV / ATV |  D.Menu / Top |
|  0 |  0 |
|  Recall |  Back / Return |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |

| Originale | Sostituto |
|----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|  Vol + |  Vol+ |
|  MTS |  Audio / Lang I/II |
|  CH + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  RECLIST |  Smart / List |
|  CH - |  CH- / Page- |
|  FAV List |  Fav / Marker / PC |
|  REC |  Rec / Rec Mode |
|  Freeze |  Pause / Step / Freeze |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Source |  AV / Input / RDS |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-------------------------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------|-----------------------------|-------------------------------------------------------------------------------------|------|-------------------------------------------------------------------------------------|----------------|
|  | Display |  | Display / Media |  | Hold |  | Shift + Stop / |
|  | Red |  | Red / Netflix / Search |  | Text |  | Text / Goto |
|  | Green |  | Green / APP / Repeat | | | | |
|  | Yellow |  | Yellow / YouTube / Repeat | | | | |
|  | Blue |  | Blue / Prime Video / Random | | | | |
|  | << / Guide |  | << / Tune- | | | | |
|  | << / Guide |  | Guide / EPG / -/-- | | | | |
|  | Play/Pause / Timeshift |  | Play / Slow | | | | |
|  | >> / Aspect |  | >> / Tune+ | | | | |
|  | I<< / Cancel |  | I<< / Preset- | | | | |
|  | >>I / Subpage |  | >>I / Preset+ | | | | |
|  | Stop / Index |  | Info / Angle | | | | |
|  | Stop / Index |  | Stop / Hold | | | | |
|  | TV / Radio |  | TV/Radio / | | | | |
|  | Subtitle |  | Subtitle / EQ | | | | |
|  | Reveal |  | Setup / OPT / | | | | |
|  | Size |  | Zoom / Size | | | | |

