

 

 

 

 

 

 

 

 

 

 

 

 

 
 
 

 







Originale	Sostituto
 Power	 Power
 TV	 Smart / List
 TV	 Shift + 1
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Info	 Info / Angle
 Zoom	 Zoom / Size

Originale	Sostituto
 Picture	 Picture / Format
 Sound	 Sound / Title
 Vol +	 Vol+
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 CH -	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 I / II	 Audio / Lang I/II
 Still	 Shift + Pause / Step /
 HDMI	 Shift + 0





Originale	Sostituto
VGA	Shift + 4
VGA	Display / Media
DMP	D.Menu / Top
Subtitle	Subtitle / EQ
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold
<<<	<<< / Tune-
>>>	>>> / Tune+
I<<<	I<<< / Preset-
>>>I	>>>I / Preset+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Text	Text / Goto
Size	Shift + Zoom / Size

Originale	Sostituto
Reveal	Guide / EPG / -/--
Cancel	Shift + Exit / Cancel / Clear
Hold / Sleep	Sleep / Timer
Hold / Sleep	Shift + Stop /
Index	Fav / Marker / PC
Sub.Code	Eject / Surround
Mix	Shift + Text /

