



| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Anyview Cast |  Shift + Up |
|  Anyview Cast Off |  Shift + Down |
|  TV |  TV/Radio / |
|  Source |  AV / Input / RDS |
|  I<< |  I<< / Preset- |
|  Stop |  Stop / Hold |
|  >>I |  >>I / Preset+ |
|  << |  << / Tune- |
|  Play |  Play / Slow |
|  >> |  >> / Tune+ |
|  DMP |  Display / Media |
|  Pause |  Pause / Step / Freeze |
|  FAV |  Fav / Marker / PC |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |

| Originale | Sostituto |
|---|---|
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Menu |  Menu / Home |
|  HiSmart |  Smart / List |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Return |  Shift + Back / Return |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Vol+ |  Vol+ |
|  CH.List |  Shift + Smart / List |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  EPG |  Guide / EPG / -/- |
|  CH- |  CH- / Page- |





| | Originale | Sostituto |
|------------|-----------|----------------------------------|
| 1 | 1 | TV 1 |
| 2 | 2 | DVD 2 |
| 3 | 3 | CD - STB 3 |
| 4 | 4 | VIDEO 4 |
| 5 | 5 | TAPE 5 |
| 6 | 6 | TUNER 6 |
| 7 | 7 | AUX - HDD 7 |
| 8 | 8 | USB 8 |
| 9 | 9 | BLUETOOTH 9 |
| INFO | Info | ANGLE INFO Info / Angle |
| 0 | 0 | HDMI - BAT 0 |
| PRE-CH | PRE-CH | BACK Back / Return |
| I/II LANG. | Lang/I-II | LANG /II AUDIO Audio / Lang I/II |
| P.MODE | P.Mode | FORMAT PICTURE Picture / Format |
| S.MODE | S.Mode | TITLE SOUND Sound / Title |
| SIZE | Size | SIZE ZOOM Zoom / Size |
| SUBT. | Subt. | EQ SUBTITLE Subtitle / EQ |

| | Originale | Sostituto |
|----------|-----------|-------------------------------|
| TEXT | Text | GOTO TEXT Text / Goto |
| INDEX | Index | TOP MENU D.MENU D.Menu / Top |
| SUB-PAGE | Subpage | OPT-TOOLS SETUP Setup / OPT / |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

