






 

 

 

 


 
 

 

 
 
 

 
 

 
 



 
 



















 



 


 
 
 
 
 
 
 




Originale	Sostituto
	 Power
	 TV/R
	 AV
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Pre Ch
	 Info
	 Shift + Pre Ch
	 Shift + Format

Originale	Sostituto
	 Shift + Dual
	 Vol +
	 Vol -
	 Mute
	 Ch +
	 Ch -
	 Menu
	 Guide
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Dual
	 List
	 Eject
	 Exit





Originale	Sostituto
Radio / Browse	Shift + TV/R
T.Shift / Rotate	Shift + AV
Audio / Page up	Shift + Ch +
Audio / Page up	Shift + Subt
Subtitle / Page down	Subt
Subtitle / Page down	Shift + Ch -
D/EMP	Smart
Media / PVR	Media
Play / Pause	Play
Play / Pause	Pause
Stop	Stop
Red / <<<	Red
Red / <<<	<<<
Green / >>>	Green
Green / >>>	>>>
Yellow / I<<<	Yellow
Yellow / I<<<	I<<<

Originale	Sostituto
Blue / >>>I	Blue
Blue / >>>I	>>>I
Text / Setup	Text
Size	Format
Reveal	Options
Cancel	Back
Hold / Sleep	Sleep
Index	Shift + Info
Sub.Code /	3D
Mix	Shift + Options

