



 

 

 
 

















 
 
 
 

 






 
 


Originale	Sostituto
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide
 CH.List	 List
 Play	 Play
 Red	 Red
 Green	 Green

Originale	Sostituto
 Yellow	 Yellow
 Blue	 Blue
 [=]	 Menu
 Pause	 Pause
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Back	 Back
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 Home	 Smart
 Micro	 Media
 CH+	 Ch +
 CH-	 Ch -





Originale	Sostituto
 Subtitle	 Subt
 Mute	 Mute
 Text	 Text
 Free	 Options
 Sports	 TV/R
 Chili	 Dual
 Netflix	 Shift + Media
 prime video	 3D
 YouTube	 Pre Ch
 TV Timvision	 Shift + TV/R
 Rakuten Tv	 D. Menu
 Rai Play	 Shift + Smart

Originale	Sostituto

