 


 

 

 







 















 





Originale	Sostituto
 Power	 Power
 TV / DTV	 TV/Radio /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Info	 Info / Angle
 Fav	 Fav / Marker / PC
 Picture	 Picture / Format

Originale	Sostituto
 Sound	 Sound / Title
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 I/II	 Audio / Lang I/II
 Still	 Pause / Step / Freeze
 Zoom	 Zoom / Size
 Exit	 Exit / Cancel / Clear



