









 

 







 





Originale	Sostituto
	 Power
	 AV / Input / RDS
	 Display / Media
	 Fav / Marker / PC
	 1
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 D.Menu / Top
	 Menu / Home
	 Vol+
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer

Originale	Sostituto
	 CH- / Page-
	 << / Tune-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 Picture / Format
	 Sound / Title
	 Yellow / YouTube / Repeat
	 Green / APP / Repeat
	 Blue / Prime Video / Random
	 Red / Netflix / Search

