

 

 

 

 

 

 



 

 

 
 


 

 

 








 

 

 

 

 

 

 

 



 





Originale	Sostituto
 POWER	 Power
 INFO	 Info / Angle
 HDMI CONTROL	 Smart / List
 SLEEP	 Sleep / Timer
 SCREEN	 Picture / Format
 SOURCE	 AV / Input / RDS
 PRESETS	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 ZOOM/RED/▲	 Zoom / Size
 ZOOM/RED/▲	 Shift + CH+ /
 ZOOM/RED/▲	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 REPEAT/GREEN/▼	 Shift + CH- / Page-

Originale	Sostituto
 REPEAT/GREEN/▼	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 ROOT/YELLOW	 Yellow / YouTube / Repeat
 RETURN	 Back / Return
 0	 0
 MENU	 Menu / Home
 TITLE/BUE	 Sound / Title
 TITLE/BUE	 Blue / Prime Video / Random
 UP	 Up
 LEFT	 Left
 OK/SELECT	 OK
 RIGHT	 Right
 DOWN	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-





Originale	Sostituto
	VOL - Vol-
	VOL + Vol+
	PC FAV MARKER Fav / Marker / PC
	LANG I/II Audio / Lang I/II
	EQ SUBTITLE Subtitle / EQ
	DIMMER MUTE Mute / Dimmer
	SHIFT + RETURN BACK Shift + Back / Return
	GUIDE EPG Guide / EPG / -/-
	TOP MENU D.MENU D.Menu / Top
	GOTO TEXT Text / Goto
	CLEAR EXIT CANCEL Exit / Cancel / Clear
	MEDIA DISPLAY Display / Media
	SHIFT + ANGLE INFO Shift + Info / Angle
	SHIFT + NETFLIX SEARCH Shift + Red / Netflix /
	REC MODE Rec / Rec Mode
	HOLD Stop / Hold
	SLOW Play / Slow

Originale	Sostituto
	STEP - FREEZE Pause / Step / Freeze
<< button"/>	TUNE- << / Tune-
>> button"/>	TUNE+ >> / Tune+
	PRESET- I<< / Preset-
>>I button"/>	PRESET+ >>I / Preset+

