





 

 

 
 

 

 
 

 


 

 
 

 

 
 


 

 
 
 
 
 





 


 
 
 
 

 
 
 


 
 
 


 






Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Select	 Ok
 M	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 -/--	 Guide
 -/--	 Exit
 P<P/Swap	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 PP	 Eject
 I-II	 Dual
 Tv/DTV	 TV/R
 [≡]	 Text
 [≡0]	 Options
 AV/Source	 AV
 [≡+]/[X]	 Format
 [≡X]/[■ ■]	 3D
 [≡.]/[■ ■]	 Subt



