 


 

 


 



 







 
 



 
 
 
 


 
 
 


 

 


 


 


 





 





 
 


 





 


 


 

 

 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol +		Vol +
	[≡]		Text		Vol -		Vol -
	16:9		Format		P +		Ch +
	Mute		Mute		P -		Ch -
	Red		Red		1		1
	Green		Green		2		2
	Yellow		Yellow		3		3
	Blue		Blue		4		4
	Digital		Smart		5		5
	Up		Up		6		6
	Left		Left		7		7
	OK		Ok		8		8
	Right		Right		9		9
	Down		Down		0		0
	TV		TV/R		Recall		Pre Ch
	Exit		Exit		CH Guide		Guide
	Menu		Menu		[≡i] / Help		Options











 

 




 


 
 

 





 













 




 
 
Originale	Sostituto
 [....]	 Subt
 [=□] / [▶◀]	 Stop
 Input	 AV
 [=?] / ((↔))	 Media
 [=X] / ⊖	 Shift + Exit
 [≡⇅] / Info	 Info
 Lang I-II	 Dual

Originale	Sostituto





Originale	Sostituto
 Power	 Power
 Viewlink VCR REC	 Rec
 Play	 Play
 <<	 <<
 Pause	 Pause
 >>	 >>
 Stop	 Stop
 TV	 Smart
 Menu	 Menu
 P +	 Ch +
 P -	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 0	 0
 Input	 AV
 Lang I-II	 Dual

