











 

 

 
 

 


















Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang.	 Dual
 [=].	 Subt
 Home	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto
 Input	 AV
 P+	 Ch +
 P-	 Ch -
 [G]	 Guide
 i	 Info
 ←	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Netflix	 Media
 YouTube	 TV/R
 Menu	 Menu
 *1	 Format
 <<	 <<





Originale	Sostituto	Originale	Sostituto
 Stop	 Stop		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Pause	 Pause		
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

