



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
Display	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Up	Up
Up	CH+ / Page+
Down	Down
Down	CH- / Page-

Originale	Sostituto
Vol+ / Right	Right
Vol+ / Right	Vol+
Vol- / Left	Left
Vol- / Left	Vol-
Menu	Menu / Home
◊	Smart / List
AV	AV / Input / RDS
TV	TV/Radio /
Text	Text / Goto
Red / F	Red / Netflix / Search
Green / →←	Green / APP / Repeat
Yellow / Recall	Yellow / YouTube / Repeat
Yellow / Recall	Back / Return
Blue / Timer	Blue / Prime Video / Random
Blue / Timer	Sleep / Timer

