


 



 
 





 
 





Originale	Sostituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	D.Menu / Top
	0
	Menu / Home
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold

Originale	Sostituto
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Up
	Guide / EPG / -/--
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down





Originale	Sostituto
Back	Back / Return
Vol +	Vol+
EPG	+ Shift + Guide / EPG / --
P +	CH+ / Page+
Vol -	Vol-
i	Info / Angle
P -	CH- / Page-
List	Smart / List
Dual View	Zoom / Size
mhp	Setup / OPT /
Search	+ Shift + Red / Netflix /
Text	Text / Goto
Audio	Audio / Lang I/II
SUB	Subtitle / EQ
TV / Radio	TV/Radio /
Source	AV / Input / RDS
V-Format	Picture / Format

Originale	Sostituto
Agenda	Fav / Marker / PC
REC List	+ Shift + Smart / List

