






































 










 







Originale		Sostituto	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Source		AV / Input / RDS

Originale		Sostituto	












 




Originale		Sostituto	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originale		Sostituto	
	Red		Red / Netflix / Search
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	i		Info / Angle
	CH+		CH+ / Page+
	CH-		CH- / Page-











Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold

Originale	Sostituto
 Pause	 Pause / Step / Freeze
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Media	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK/List	 OK
 OK/List	 +  Shift + Smart / List
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Last	 Back / Return
 Vol+	 Vol+
 Info	 Info / Angle





Originale	Sostituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 I>	 Shift + Play /
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 ?	 D.Menu / Top
 Audio	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 [=+] Sound / Title	
 [≡I≡] Smart / List	
 OPT+	 Setup / OPT /
 Edit	 Fav / Marker / PC
 Teletext	 Text / Goto
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer

Originale	Sostituto
 Source	 AV / Input / RDS
 Wide	 Zoom / Size
 V-Format	 Picture / Format





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 <<	 << / Tune-
 >>	 >> / Tune+
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK/List	 OK

Originale	Sostituto
 OK/List	 Smart / List
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Vol+	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-

