



Originale	Sostituto
Standby / Snooze	Power
TV / AV	AV / Input / RDS
Mute	Mute / Dimmer
Sleep	Sleep / Timer
Pic Mode	Picture / Format
SND Effect	Sound / Title
Wide	Shift + Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
FAV	Fav / Marker / PC

Originale	Sostituto
0	0
List	Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
EPG	Guide / EPG / -/--
Up	Up
Back	Back / Return
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Vol+	Vol+
TV / Radio	TV/Radio /





Originale	Sostituto
P- / Page-	CH- / Page-
Vol-	Vol-
Info	Info / Angle
P+ / Page+	CH+ / Page+
[≡]	Text / Goto
[/≡]	Play / Slow
[≡i]	Pause / Step / Freeze
PIP	Shift + Red / Netflix /
[≡X]	Rec / Rec Mode
[≡?]	<< / Tune-
[≡M]	>> / Tune+
Size	Shift + Green / APP /
[≡↓]	I<< / Preset-
[≡□]	Stop / Hold
[≡⊕]	>>I / Preset+
Sel	Shift + Yellow / YouTube /
DTV Setup	D.Menu / Top

Originale	Sostituto
OPT+	Setup / OPT /
⏩	Display / Media
Pos	Shift + Blue / Prime
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ

