
 
 






 
 

 


 
 
 
 
 
 

 


 


 
 

 
 
 



 
 
 





Originale	Sostituto	Originale	Sostituto
On/Off	 Power	VCR/TV	 TV/R
Audio Out	 Mute	Tracking+	 Ch +
Slow Down	 Eject	Menu Right	 Right
F.Adv	 Format	Tracking-	 Ch -
Stop	 Stop	Exit	 Exit
Auto/Track	 List	Menu Down	 Down
Slow/Dpss-	 +  Shift + <<	Next	 >>
Mon/TV	 Text	Display	 +  Shift + Info
Menu	 Menu	1	 1
Pause	 Pause	2	 2
Video/Go-To	 Media	Prev.	 <<
Sp/Lp/Speed	 D. Menu	Encode	 Subt
Menu Up	 Up	3	 3
Menu Left	 Left	4	 4
OK Enter	 Ok	Audio	 Dual
Slow/Dpss+	 +  Shift + >>	Vps/Pdc	 Back
T.Set/Clock	 3D	5	 5



Originale	Sostituto	Originale	Sostituto
6	 6	Counter/Memor	 Red
7	 7	Info/Intro	 Info
Next Sv+V	 +  Shift + >>	0	 0
Audio Dub	 +  Shift + Dual	Progr/C/CH	 Pre Ch
8	 8	Counter Clock	 Green
Record	 Rec	Counter Reset	 Yellow
Rewind	 <<	Once	 +  Shift + 1
Play	 Play	Daily	 +  Shift + 2
Set+	 Vol +	Input Source	 AV
Show View	 Smart	Weekly	 +  Shift + 3
Set-	 Vol -	Rec. On/Off	 +  Shift + 5
F.Forward	 >>	Timer/Sleep	 Sleep
Index Pict+	 +  Shift + Up		
Index Pict-	 +  Shift + Down		
Ch.Memo	 Options		
9	 9		
-/--	 Guide		

