



 








 


Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Mute		Mute		9		9
	Audio		Dual		0		0
	TV / STB		Shift + TV/R		PGUP		Vol +
	TV / R		TV/R		PGDN		Vol -
	Sleep		Sleep		SAT		Shift + AV
	SUB		Subt		FAV +		Ch +
	TXT		Text		FAV -		Ch -
	P / N		Shift + 1		EPG		Guide
	Recall		Pre Ch		Fav		Shift + Pre Ch
	1		1		Up		Up
	2		2		Right		Right
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Menu		Menu
	7		7		Exit		Exit





Originale	Sostituto
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Pause	 Pause
 Zoom	 Eject
 Edit	 Format
 Info	 Info
 USB	 AV
 MP3	 Media
 JPEG	 Smart
 PVR List	 List
 A - B	 Back
 T.S.	 Shift + 2
 Goto	 Options
 Stop	 Stop
 Rec	 Rec

Originale	Sostituto
 <<	 <<
 >>	 >>
 Play / Pause	 Play
 > <	 Shift + Pause
 <<	 <<
 >>	 >>

