

 

 

 
 
 
 
 

 


 
 



 
 
 
 
 

 



| Originale | Sostituto |
|---|--|
|  Standby |  Power |
|  Source |  AV |
|  Red |  Red |
|  Green |  Green |
|  Yellow |  Yellow |
|  Blue |  Blue |
|  P Mode |  Format |
|  S Mode |  Dual |
|  Freeze |  Smart |
|  TXT |  Text |
|  Mix / Fav List |  Pre Ch |
|  Size / Subtitle |  Subt |
|  Cancel / Audio |  Shift + Dual |
|  Record |  Rec |
|  << / Index |  << |
|  >> / Hold |  >> |
|  I<< / Reveal |  I<< |

| Originale | Sostituto |
|--|---|
|  >>I / Subpage |  >>I |
|  Menu |  Menu |
|  Exit |  Exit |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Play/Pause / Timeshift |  Play |
|  Play/Pause / Timeshift |  Pause |
|  Stop / EPG |  Stop |
|  Stop / EPG |  Guide |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  Mute |  Mute |
|  TV / Radio |  TV/R |
|  CH + |  Ch + |





| Originale | | Sostituto | | Originale | Sostituto |
|---|---------|---|------|-----------|-----------|
|  | CH - |  | Ch - | | |
|  | 1 |  | 1 | | |
|  | 2 |  | 2 | | |
|  | 3 |  | 3 | | |
|  | 4 |  | 4 | | |
|  | 5 |  | 5 | | |
|  | 6 |  | 6 | | |
|  | 7 |  | 7 | | |
|  | 8 |  | 8 | | |
|  | 9 |  | 9 | | |
|  | 0 |  | 0 | | |
|  | Display |  | Info | | |
|  | Recall |  | Back | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

