







 

 


 






 




 






Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Back	 Back
 APP	 Media
 Menu	 Menu
 Exit	 Exit
 EPG	 Guide

Originale	Sostituto
 i	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Tv/Radio	 TV/R
 List	 List
 P+	 Ch +
 P-	 Ch -
 Red/F1	 Red
 Green/F2	 Green
 Yellow/F3	 Yellow
 Blue/F4	 Blue
 Audio	 Dual



