



 



 







 



 





 

 





 

 

 

 



 



 

 



 

 

 

 

 

 

 









Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info / Angle
 Epg	 Guide / EPG / -/-
 Menu	 Menu / Home
 CH+	 CH+ / Page+
 Up	 Up

Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 Ok	 OK
 Right	 Right
 Vol+	 Vol+
 Media	 Display / Media
 CH-	 CH- / Page-
 Down	 Down
 TV/Radio	 TV/Radio /
 Sleep/Red	 Sleep / Timer
 Subtitle/Green	 Subtitle / EQ
 Teletext/Yellow	 Text / Goto
 Audio/Blue	 Audio / Lang I/II
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





Originale		Sostituto		Originale		Sostituto	
	>>		>> / Tune+				
	Prev		l<< / Preset-				
	Rec		Rec / Rec Mode				
	FAV		Fav / Marker / PC				
	Stop		Stop / Hold				

